Настройка сетевой камеры DCS-2132B (DLink)

Для первичной настройки сетевой камеры подключите блок питания и подключите Lan кабель в разъем Ethernet дождитесь пока индикатор питания загориться зеленым цветом.

После этого скачайте приложение MyDlink по ссылке <u>http://www.dlink.ru/ru/products/1433/1685.html</u> (мастер установки для Windows (H/W Bx)

Запустите приложение и следуйте подсказкам мастера для отображения и поиска камеры в локальной сети

nydlink	DCS-2132L Setup Wizard
Welcome	
You will be able to set up your Cloud Camera to use mydlink Cloud service, or you can choose to have the camera run independently.	0
Select your language: English	······································
Start 🕨	30

После успешной инициализации камеры будет присвоен ір адрес по DHCP

Далее зайти через браузер (IE) для дальнейшей настройки параметров камеры

The server 192	2.168.0.50 at DCS-2132L requires a username and password.
Warning: This ent in an inse connection).	server is requesting that your username and password be ecure manner (basic authentication without a secure
	User name Password
	Remember my credentials

Пользователь по умолчанию admin

Пароль : пусто (без пароля)

После входа в веб интерфейс можно изменять необходимые настройки камеры

После входа в веб интерфейс камеры задайте пароль администратора

Закладка **Maintenance** Device management Admin password setting Установите новый пароль Подтвердите пароль

ADMIN		
Here you can change delete user account(s via this page. You can camera name and tim	the administrator's pa). You can configure t also enable the OSD e stamp for your video	issword for your IP camera as well as add and/or he information, such as IP camera's name and time (On-Screen Display) feature in order to display the IP recordings.
ADMIN PASSWOR	D SETTING	
New Password Retype Password		63 characters maximum Save
ADD USER ACCOU	UNT	
User Name New Password Retype Password	Add	20 users maximum 63 characters maximum
USER LIST	User list 🔻	Delete
DEVICE SETTING		
IP camera Name	DCS-2132L	63 characters maximum
Label Show time	DCS-2132L	63 characters maximum
LED		
LED	● On ◎ Off	Save

Основные настройки видеокамеры для подключения к NVR (XVR)

Please select whether your IP camera wil	connect to the Int	ternet with a DHCP connection	on or Static IP address. If your IP
camera is connected to a router, or you a	are unsure which se	ettings to pick, D-Link recomm	nends that you keep the default
selection of DHCP connection. Otherwise	, dick on Static IP a	address to manually assign a	nd IP address before clicking on the
Vext button. Please contact your ISP of y	ou do not know yo	ur Username and Password.	using PPPOE and then click on the
O	DHCP		
۲	Static IP Client		
	IP address	192.168.0.53	
	Subnet mask	255.255.255.0	
	Default router	192.168.0.1	
	Primary DNS	192.168.0.1	
	Secondary DNS	0.0.0.0	
	Enable PPPoE		
	User Name		
		(e.g. 654321@hinet.net	:)
	Password		

Настройка сети

Выберите пункт static IP Client и присвойте статический IP адрес устройству



Save Settings Don't Save Settings

10 -

Audio out off

Audio out volume level

800x480

FPS 25

Режим CBR (512k)

Настройка даты и времени

	Save Settings Don't Sav	re Settings
1E CONFIGURATIO	N	
ne Zone (GMT+08:00) T	aipei	•
Enable Daylight Savin	9	
Auto Daylight Sa	iving	
Set date and tir	ne manually	
Offset	+2:00 *	
	Month Week Day of w	veek Hour Minutes
Start time	5 🔻 1 👻 Sunday	- 00 00
End time	10 🔻 1 🔻 Sunday	▼ 00 00
TOM ATTO TIME OO	NFIGURATION	
TOMATIC TIME CO		
Synchronize with NT	Server	2 IV.
Synchronize with NTI P Server	Server	<
Synchronize with NTI	P Server Intp.dlink.com.tw	<
Synchronize with NTI P Server	P Server Intp.dlink.com.tw MANUALLY	<
Synchronize with NTI P Server I DATE AND TIME	P Server Intp.dlink.com.tw MANUALLY Inually	<
Synchronize with NTF P Server I DATE AND TIME Set date and time m ear 2011 *	P Server Intp.dlink.com.tw MANUALLY anually Month <u>1</u>	<

Выберите пункт Time Zone установите GMT+02:00

Установите Synchronize with NTP Server

Настройка детектора движения



Save Settings Don't Save Settings

Активируйте пункт Enable Video Motion

Активируйте необходимую зону на видео настройте чувствительность сработки зоны детекции

Для подключения по WIFI зайдите в настройки Wireless Setup

и включите беспроводный интерфейс и пропишите параметры своей WIFI сети

сохраните параметры . Выключите камеру отсоедините Lan кабель с устройства включите камеру . Камера подключится по беспроводному интерфейсу.

	Save Settings Dep't Save Settings
	Save Seturgs
WIRELESS CONFIG	GURATION
Enable Wireless	
Site Survey	===SSID List=== * Rescan
SSID	default
Wireless Mode	Infrastructure *
Channel	Auto *
Authentication	Open *
Encryption	Disable *
Default Key	1 -
Key 1	
Key 2	
Key 3	
Key 4	
	(5 or 13 ASCII, 10 or 26 HEX characters)

Камеру также можно подключать по протоколу ONVIF к NVR

Для поиска камеры по ONVIF протоколу используйте программу ODM

https://sourceforge.net/projects/onvifdm/



После настроек IP камеры добавьте в NVR (XVR) Добавление камеры происходит по протоколу ONVIF

Camera	Camera Hardwar e Profile	 1/4" Megapixel progressive CMOS sensor 5 meter IR illumination distance Minimum illumination: 0 lux with IR LED on Built-in Infrared-Cut Removable (ICR) Filter module Built-in PIR sensor (5 meter) Built-in microphone and speaker 	 # 10x digital zoom # Focal length: 3.45 mm # Aperture: F2.0 # Angle of view: # (H) 57.8° # (V) 37.8° # (D) 66°
	Image Features	 Configurable image size, quality, frame rate, and bit rate Time stamp and text overlays Configurable motion detection windows 	 Configurable privacy mask zones Configurable shutter speed, brightness, saturation, contrast, and sharpness
	Video Compres sion	 Simultaneous H.264/MJPEG format compression 	JPEG for still images

		H.264 multicast streaming	
	Video Resoluti on	16:9 - 1280x720, 800x448, 640x360, 480x272, 320x176	4:3 - 960x720, 800x592, 640x480, 480x352, 320x240
	Audio Support	G.711, AAC	
	External Device Interface	 10/100 BASE-TX Fast Ethernet port IEEE 802.11n 2.4GHz single band wireless 	 I/DO port MicroSD/SDHC card slot
	Network		
Network	S	IPv6 IPv4 TCP/IP UDP ICMP DHCP client NTP client (D-Link) DNS client DDNS client (D-Link) SMTP client FTP client	HTTP / HTTPS Samba Client PPPoE UPnP port forwarding RTP / RTSP/ RTCP IP filtering QoS CoS Multicast IGMP ONVIF compliant
	Security	Administrator and user group protectionPassword authentication	HTTP and RTSP digest encryption

Технические характеристики камеры

Для сброса камеры к заводским настройкам -нажмите и удерживайте кнопку RESET (5секунд) и включите питание камеры.